


The BLAIN EV40-vvfv program includes the widest range of vvvf solution offered to the elevator industry for high performance passenger elevators. Easy to install, EV40's are smooth, reliable and precise in operation throughout extreme load and temperature variations with inbuilt overload protection and different energy saving modes. The EV40 system uses the control of L1000H or GA700 vvvf drive in the up travel, while down travel is managed by the EV40 valve itself. In this way, the EV40-vvfv solution offers the most cost-effective and energy-efficient solution.



3/4" EV40



1 1/2" & 2" EV40

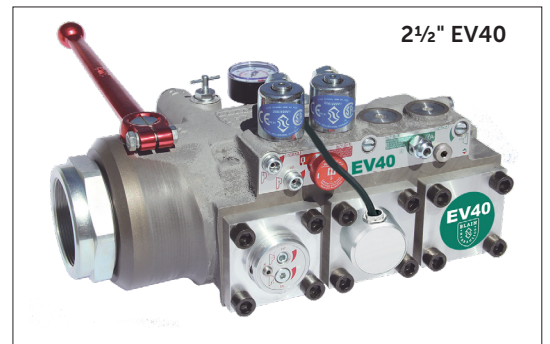

2 1/2" EV40

### Description

Available port sizes are 3/4", 1 1/2", 2" and 2 1/2" pipe threads, depending on flow. EV40 eliminates high inrush currents and does not require wye-delta switching. According to customers' elevator data, valves are factory adjusted, ready for operation and very simple to readjust if desired. The L1000H or GA700 YASKAWA drives combined with feedback systems that are designed to compensate elevator speed fluctuations regardless of oil temperature and car load conditions.

**Caution:** The EV4 valve is to be used only together with L1000H or GA700 YASKAWA drives and not as a standalone control valve. EV40 valves include the following features essential for efficient installation and trouble free service:




- Simple Responsive Adjustment
- Temperature and Pressure Compensations
- Pressure Gauge and Shut Off Cock
- Self Closing Manual Lowering
- Self Cleaning Pilot Line Filters

- Self Cleaning Main Line Filter (Z-T)
- Built-in Turbulence Suppressors
- 70 HRC Rockwell Hardened Bore Surfaces
- 100% Continuous Duty Solenoids
- Compact and aesthetic design


### Technical Data:

		3/4" EV40	1 1/2" & 2" EV40	2 1/2" EV40
<b>Flow Range:</b>	l/min (US gpm)	10-125 (2-33)	30-800 (8-212)	500-1530 (130-405)
<b>Pressure Range (valve):</b>	bar (psi)	8-70 (116-1015)	8-70 (116-1015)	8-68 (116-986)
<b>Press. Range CSA (valve):</b>	bar (psi)	8-55 (117-797)	8-55 (117-797)	8-55 (117-797)
<b>Burst Pressure Z:</b>	bar (psi)	575 (8340)	505 (7324)	340 (4931)
<b>Pressure Drop P-Z:</b>	bar (psi)	6 (87) at 125 l/min	4 (58) at 800 l/min	4 (58) at 1530 l/min
<b>Weight:</b>	kg (lbs)	5 (11)	10 (22)	14 (31)
<b>Coils AC:</b>		24 V/1.8 A, 42 V/1.0 A, 110 V/0.43 A, 230 V/0.18 A, 50/60 Hz.		
<b>Coils DC:</b>		12 V/2.0 A, 24 V/1.1 A, 42 V/0.5 A, 48 V/0.6 A, 80 V/0.3 A, 110 V/0.25 A, 196 V/0.14 A.		
<b>Oil Viscosity:</b>		25-75 cSt. at 40°C (104°F).		
<b>Operation oil temperature range:</b>		10°C-60°C (50°F-140°F), for oil VGA46: 250cSt.-20 cSt.		
<b>Optimal oil temperature range:</b>		25°C-55°C (77°F-131°F), for oil VGA46: 100cSt.-24 cSt.		
<b>Ambient temperature range:</b>		0°C-50°C (32°F-122°F)		
<b>Insulation Class, AC and DC:</b>		IP 68		
<b>Max. Oil Temperature:</b>		70°C (158°F)		


3/4" EV40

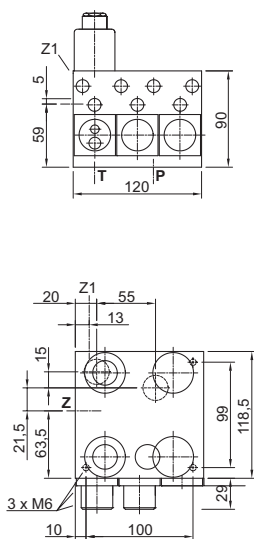

1 1/2" & 2" EV40

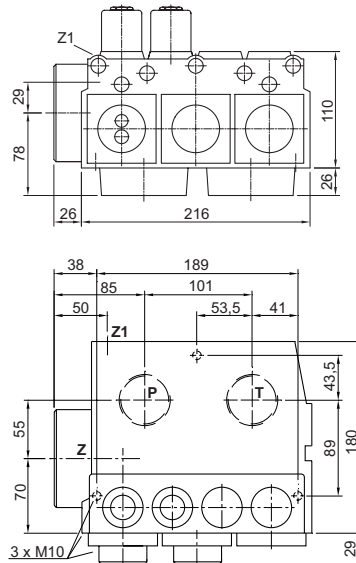

2 1/2" EV40

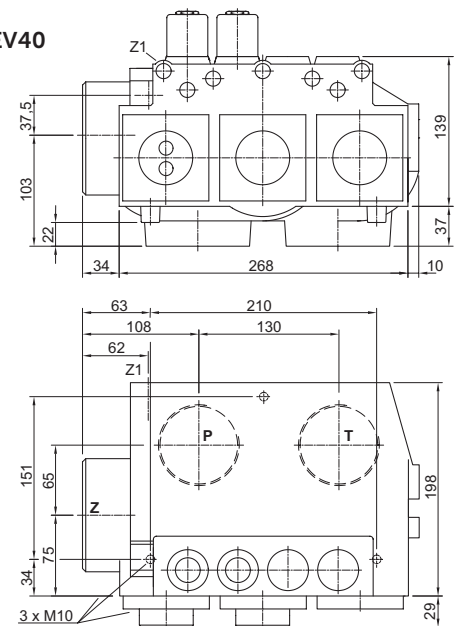

Blain Hydraulics GmbH  
 Pfaffenstrasse 1  
 74078 Heilbronn  
 Germany

Tel. +49 7131 28210  
 Fax +49 7131 282199  
 www.blain.de  
 info@blain.de



GmbH

Designer and Manufacturer of the highest quality control valves & safety components for hydraulic elevators

## Optional Equipment

<b>EN</b>	Emergency Power Coil	<b>DH</b>	High Pressure Switch
<b>CSA</b>	CSA Coils	<b>DL</b>	Low Pressure Switch
<b>KS</b>	Slack Rope Valve	<b>CX</b>	Pressure Compensated Down Valve
<b>BV</b>	Main Shut-Off Valve	<b>MX</b>	Auxiliary Down
<b>HP</b>	Hand Pump		



## EV40

3/4"



1 1/2" & 2"



2 1/2"



- Up** Up to 1 m/s (200 fpm). 2 Full Speeds and 1 Levelling Speed. Up Start, speeds, transition times and up stop are adjusted by inverter parameters.
- Down** Up to 1 m/s (200 fpm). 1 Full Speed and 1 Levelling Speed. All down functions are smooth and adjustable.

### Control Elements

- |                                       |                                  |
|---------------------------------------|----------------------------------|
| <b>C</b> Solenoid (Down Deceleration) | <b>U</b> By Pass Valve           |
| <b>D</b> Solenoid (Down Stop)         | <b>V</b> Check Valve             |
| <b>H</b> Manual Lowering              | <b>X</b> Full Speed Valve (Down) |
| <b>S</b> Relief Valve                 | <b>Y</b> Levelling Valve (Down)  |
|                                       | <b>F</b> Filter                  |


### Adjustments UP

- None  
(Fixed Orifice)

### Adjustments DOWN


- 6** Down Acceleration  
**7** Down Full Speed  
**8** Down Deceleration  
**9** Down Levelling Speed

### Hydraulic Circuit

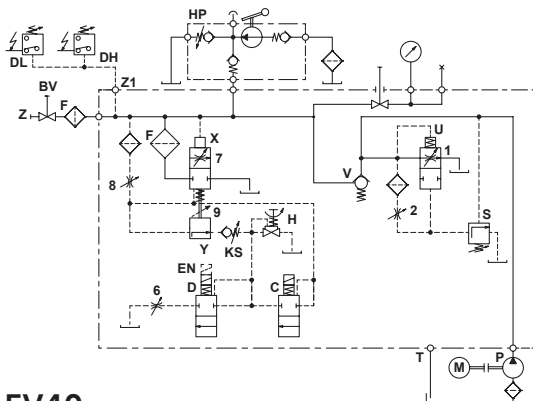

EV40

### Electrical Sequence

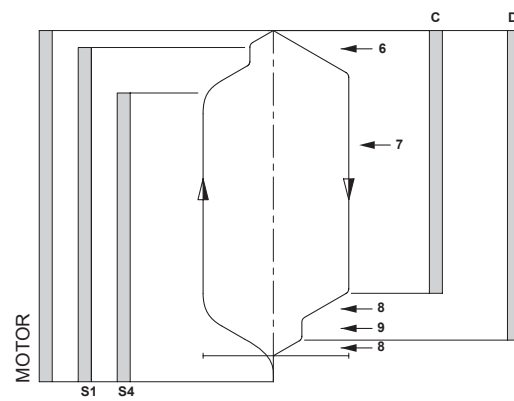


### UP direction control



**Caution:** Please refer to the detailed installation and set-up procedure of the EV40-F handbook and L1000H or GA700 YASKAWA technical manual.

The up direction is controlled by the YASKAWA L1000H or GA700 drives. The drive with the help of its software measures the load in the car, reads the current oil temperature through a temperature sensor and processes oil and pump performance data in order to obtain motor speeds for the nominal, inspection and levelling speeds.

After entering the oil type and elevator data a teach run with empty car is sufficient enough for the drive to configure itself and learn automatically during the initial set-up.

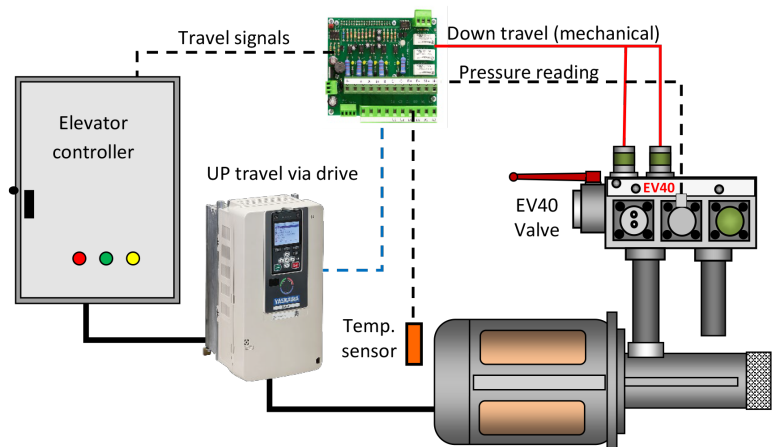



**Warning:** Only qualified personnel should adjust or service the EV40 valve and the L1000H or GA700 drives. Unauthorised manipulation may result in injury, loss of life or damage to equipment. Prior to servicing internal parts, ensure that the electrical controller is switched off, cylinder line is closed and residual pressure in the valve is reduced to zero.



## Adjustments DOWN

**Valves are already adjusted and tested.** Check electrical operation before changing valve settings. Test that the correct coil is energised, by removing nut and raising the coil slightly to feel pull.

**Standard settings:** adj. **7 & 9** level with flange faces, then turn out adj. **9** for ½ a turn; turn in adj. **6 & 8** completely, then for EV40 ¾": turn out adj. **6** for 2½ turns and turn out adj. **8** for 1 turn; for EV40 1½" - 2½": turn adj. **6** for 2 to 2½ turns out and adj. **8** for 1½ turns out.

**6. Down Acceleration:** When coils **C** and **D** are energized, the car will accelerate downwards according to the setting of adjustment **6**. 'In' (clockwise) provides a softer down acceleration, 'out' (c-clockwise) a quicker acceleration.

**7. Down Speed:** With coils **C** and **D** energized as in **6** above, the full down speed of the car is according to the setting of adjustment **7**. 'In' (clockwise) provides a slower down speed, 'out' (c-clockwise) a faster down speed.

**8. Down Deceleration:** When coil **C** is de-energized whilst coil **D** remains energized, the car will decelerate according to the setting of adjustment **8**. 'In' (clockwise) provides a softer deceleration, 'out' (c-clockwise) a quicker deceleration.

**Attention: Do not close all the way in! Closing adjustment 8 completely (clockwise) may cause the car to fall on the buffers.**

**9. Down Levelling:** With coil **C** de-energized and coil **D** energized as in **8** above, the car will proceed at its down levelling speed according to the setting of adjustment **9**. 'In' (clockwise) provides a slower, 'out' (c-clockwise) a faster down levelling speed.

**Down Stop:** When coil **D** is de-energized with coil **C** remaining de-energized, the car will stop according to the setting of adjustment **8** and no further adjustment will be required.


**KS Slack Rope Valve:** Both coils **C** and **D** must be de-energized beforehand! Loosen the small grub screw on the top of the **K** on the left hand side. The **KS** is adjusted with a 3 mm Allen key by turning the screw **K** 'in' for higher pressure and 'out' for lower pressure. With **K** turned all the way 'in', then half a turn back out, the unloaded car should descend when Manual Lowering **H** is opened. Should the car not descend, **K** must be turned out until the car just begins to descend, then turned out a further half turn to ensure that with cold oil, the car can be lowered as required.

## Adjustments pressure relief valve


**Valves are already checked for functionality.** Check electrical operation before changing inverter settings. Please refer to the EV40 inverter manual for necessary parameter settings.

**S Relief Valve:** 'In' (clockwise) produces a higher, 'out' (c-clockwise) a lower maximum pressure setting. After turning 'out', open manual lowering **H** for an instant.

**Important: When testing relief valve, close ball valve gradually.**

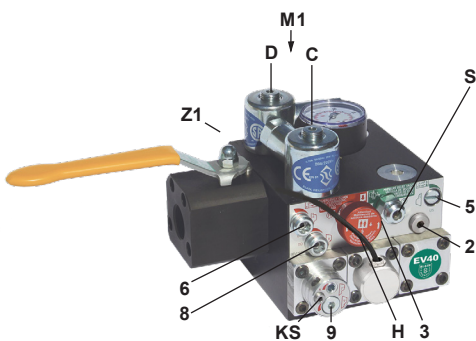

M1 Second pressure gauge connection, ½"  
Z1 Pressure switch connection, ¼"

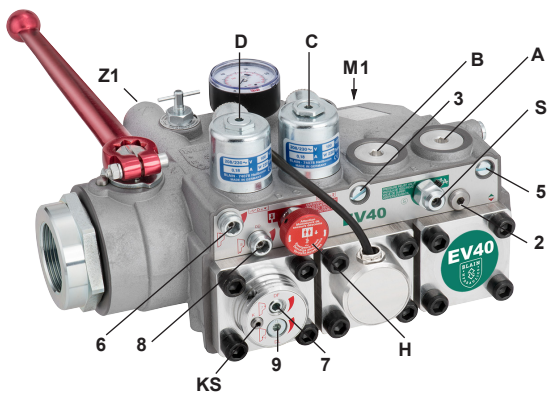

**Adjustments DOWN**  
**6** Down Acceleration  
**7** Down Full Speed  
**8** Down Deceleration  
**9** Down Levelling Speed

### Plugs


**3**  
**5**  
**A**  
**B**

### Control Elements

**C** Solenoid (Down Deceleration)  
**D** Solenoid (Down Stop)  
**H** Manual Lowering  
**S** Relief Valve  
**U** By Pass Valve  
**V** Check Valve  
**X** Full Speed Valve (Down)  
**Y** Levelling Valve (Down)  
**2** Fix Orifice



**Important:** Length of ¾" thread on pump connections should not be longer than 14 mm!

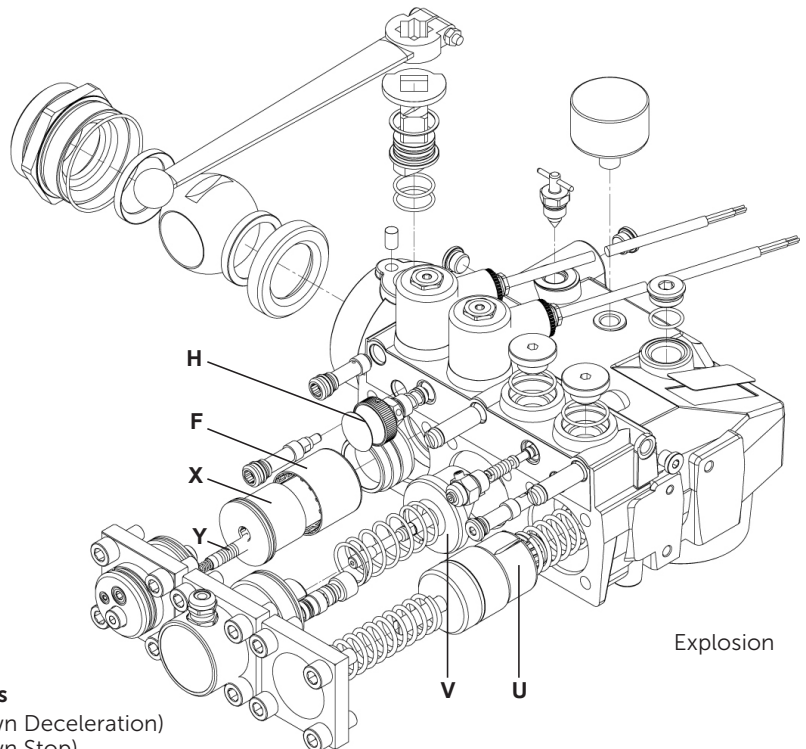



# EV40 Spare Parts List

# EV40-F


Pos. No.	Item
<b>1</b>	FS Lock Screw - Flange
	FO O-Ring - Flange
	1F4 Flange - By Pass
	UO O-Ring - By Pass Valve
	U4 By Pass Valve
	UD Noise Suppressor
	UF1 Spring - By Pass
	UF2 Spring - By Pass
US Dead Stop	
<b>2</b>	Fixed orifice
<b>3</b>	Plug
<b>4</b>	4F4 Flange - Check Valve
	FO O-Ring - Flange
	VF Spring - Check Valve
	VO Seal - Check Valve
	V Check Valve
	W Up-Levelling Valve
	WO O-Ring - Up Levelling Valve
VO Seal - Check Valve	
W6 Screw - Check Valve	
<b>5</b>	3 Plug
<b>6</b>	Adjustment - Down Acceleration
<b>7</b>	7F Flange - Down Valve
	FO O-Ring - Flange
	7O O-Ring - Adjustment
	7E Adjustment - Down Valve
	UO O-Ring - Down Valve
	XO Seal - Down Valve
	X Down Valve
XD Noise Suppressor	
F Main Filter	
<b>8</b>	Adjustment - Down Deceleration
<b>9</b>	EO O-Ring - Adjustment
	9E Adjustment - Down Levelling
	9F Spring - Down Valve
	Y Down Levelling Valve
	F Do not remove!
<b>H</b>	Manual Lowering - Self Closing
	HO Seal - Manual Lowering
<b>S</b>	SE Adjustment - Screw
	SM Hexagonal
	MS Grub Screw
	SO O-Ring - Nipple
	SZ Nipple
<b>C+D</b>	MM Nut - Solenoid
	M Coil - Solenoid (indicate voltage)
	DR Tube - Solenoid 'Down'
	MO O-Ring - Solenoid
	DF Spring - Solenoid 'Down'
	DN Needle - 'Down'
	DK Core - Solenoid
	DG Seat Housing with Screen-'Down'
	FD Filter Solenoid
	DS Seat - Solenoid 'Down'

No.	O-Ring-Size		
	3/4"	1 1/2"	2 1/2"
FO	26x2P	47x2.5P	58x3P *
EO	9x2P	9x2P	9x2P
UO	26x2V	39.34x2.62V	58x3V
WO	5.28x1.78V	5.28x1.78V	5.28x1.78V
VO	23x2.5V	42x3V	60x3V **
7O	5.28x1.78P	9x2P	9x2P
XO	13x2V	30x3V	47x3V
HO	5.28x1.78V	5.28x1.78V	5.28x1.78V
SO	5.28x1.78P	5.28x1.78P	5.28x1.78P
MO	26x2P	26x2P	26x2P


\* FO by 4F 2 1/2" is 67x2.5P  
 \*\* 90 Shore  
 O-Ring: V=FKM-Viton  
 P=NBR-Perbunan

**US is only for EV40 1 1/2" and above sizes!**

## Solenoid Valves

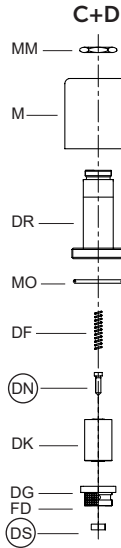







## Fix orifice



## Plug






## Adjustments

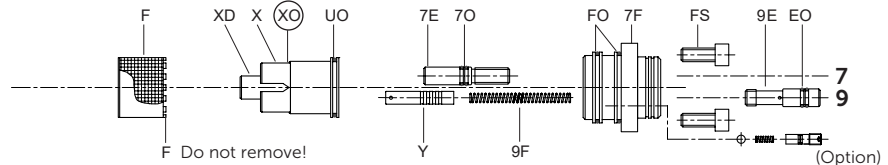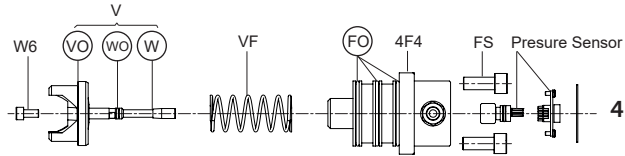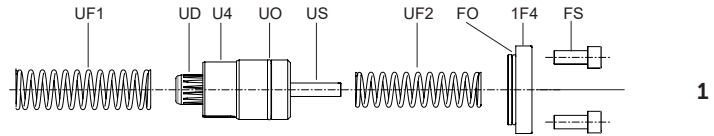




In case of internal leakage, replace and test in the following order: (DS) & (DN), (XO), (VO), (WO), (FO) + (HO).

**! Taper threads:** Do not exceed 8 turns of piping into the valve connections.

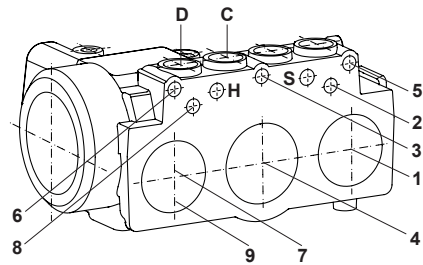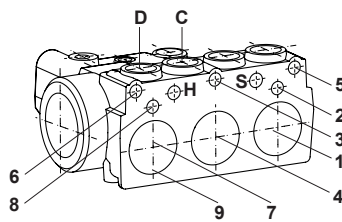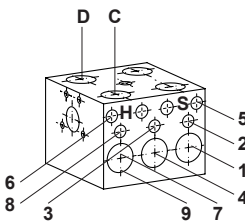

## Flow Guide Selection Charts

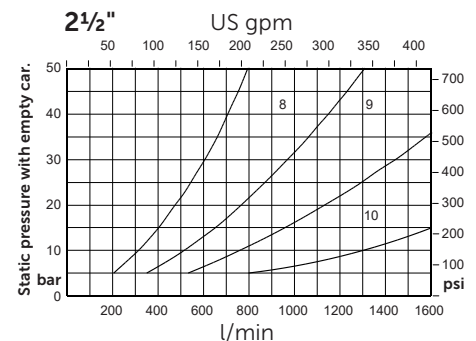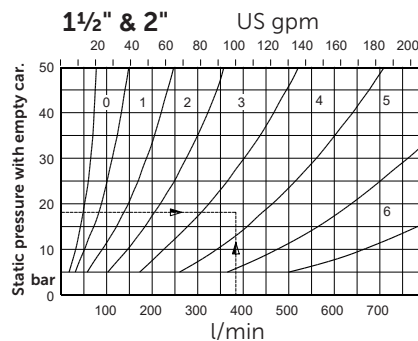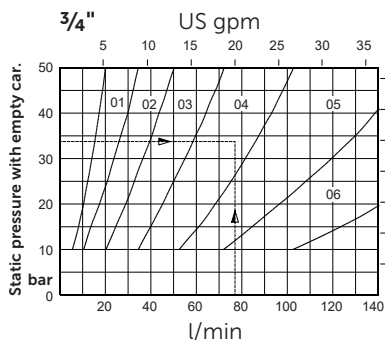

To order EV40: Size (inch), state pump flow, empty car pressure (or flow guide size) and coil voltage.

**Example order:** 1 1/2"EV40, 380l/min, 18bar (empty), 110AC or 1 1/2"EV40/4/110AC